

Technical News Bulletin

August 2023



FLEXINSPECT T¹⁸⁰ GENERATION III

Application Notes


Section 1 Overview

The Flexinspect T¹⁸⁰ Generation 3 (*Flex T¹⁸⁰*) - A comprehensive inspection solution offering versatility, value and flexibility. This configurable multi-station, servo-indexing rotary inspection system designed to inspect both round and non-round glass containers at speeds of up to 400 containers per minute (bpm). The Flexinspect T¹⁸⁰ comes equipped with SCOUT Ai technology software, where everything is based on defect classifications, automatic learned variations (AI) and predefined defect limits.



Designed as a drop-in replacement to be installed at the end of existing tri-level loop lines. Replacing FP's with modern technology and increased throughput since the Flexinspect T¹⁸⁰ reduces the number of inspection loops needed (2:1 reduction typical)

The Flexinspect T¹⁸⁰ can be configured with up to 12 inspection stations, up to seven of which can be equipped with container rotating devices. Actual maximum speed capability and inspection station/rotator configuration varies depending on container size and characteristics, as well as inspections being performed (refer to Section 2, *Ware Range*, and Section 3, *Machine Speed*).

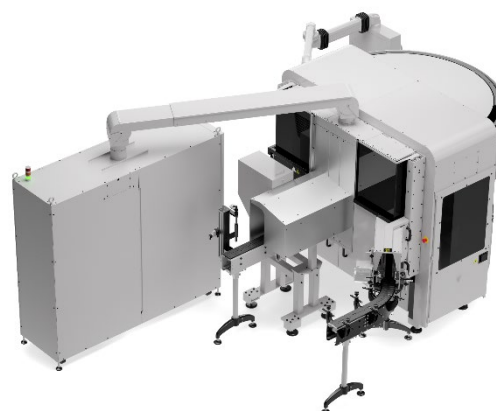

The Flexinspect T¹⁸⁰ is a complete inspection system that includes both the inspection machine and an integrated conveyor system. The machine and its conveyor are designed to be installed at a break in the main production line conveyor (refer to Section 6, *Site Preparation and Installation Requirements*)

Many machines act as one. Standard on the FleXinspect T¹⁸⁰ generation 3 equipment

Master track is designed to follow a container through each inspection device before passing or failing the container providing full correlation of inspection data to the cavity mold number and or ID Mark (matrix code). Container position is continuously monitored and verified before the rejection point. Master track generates the data glassmakers need by capturing all of a container's information before removing it from the production line.

Machine link creates a communications network that allows all of the generation 3 devices on the line to share important status information. Generation 3 machines now share their operational status with other Gen 3 equipment installed on the line, allowing them to react when changes or events occur. This optimizes ware handling, increases container throughput and line efficiencies and saves space allowing machines to be installed close together.

The FleXinspect T¹⁸⁰ is capable of performing the following inspections:

Standard Inspections

- **Non-contact optical Plug/Ring/Dip/Saddle** – Narrow Neck Field of view “FOV” 70 mm [2.76 in.] max finish diameter 29486A standard – Wide mouth optional with up to 113mm [4.45 in.] max finish diameter 29486A1. These inspections are performed at a single (rotator enabled) station using four multi-triggering cameras.
- **Check Detection** – Uses modulated lights and receivers with six, pre-set frequencies to perform finish, neck, shoulder, body, heel, and base check detection (with optional base check mounting hardware). Check detection lights and receivers can be installed at any rotator-enabled station. Standard check detection package includes 8 sensors, and 8 receivers with up to 16 modulated channels (upgradeable to 32 channels).
- **Mold Number Reading** – Heel dot code reader located at any rotator-enabled station (for ease of setup, the front center station is generally preferred).

Optional Inspections

- **Laser Vision Check Finish Module** – The “LVC” finds cracks in the glass by detecting light scattering. This is done by injecting high intensity, coherent laser light into the glass wall and looking for a disruption in the coherency. Area of inspection is 35mm from top of finish for diameters up to 55mm.
- **Optical Wall Thickness** – The FleXinspect T¹⁸⁰ can be equipped with up to 4 chromatic thickness measurement inspection systems, which can be mounted at any rotator enabled station. Options for this technology include Precitec or VMA for integration into the FleXinspect T¹⁸⁰.
- **Complete Sidewall** – Linear scan cameras setup in a two rotation stations designed to detect sidewall defects, transparent and stress (two rotating stations are used, one for upper sidewall and one for lower sidewall).
- **Sealing Surface** – 11 - 120mm [0.43 - 4.72 in.] max finish dia. – Linear scan inspection capable of detecting a range of difficult-to-detect finish defects on the interior or exterior of the finish. (light field illumination)

- **Complete Base / Base stress inspection** – High resolution array scan camera technology, capturing multiple images of the container as it rotates in the inspection station, the container image is reconstructed to provide an image of the containers base used for defect detection. Base Stress uses a dedicated high resolution array scan camera to inspect for defects such as stones causing stress, viscous knots and other annealing issues (Both Inspections are performed in the same rotate station)
- **Base Mold Code Reading** – Vision system capable of reading base dot, peanut or seven-segment numeric mold codes.
- **Mechanical Plug/Ring** – Mechanical go/no-go inspection for min/max plug and ring gauging.
- **Mechanical Dip/Saddle** – Mechanical inspection using conventional FFS head and compressed air to detect effective finishes.
- **2 - point out of round (OOR)** – This inspection is performed using advanced sensing technology to detect out of round containers measuring the maximum diameter, minimum diameter, and ovality of a glass container in a rotation station. (Flexinspect T¹⁸⁰ can support up to 2 elevations)
- **Dimensional Inspection** – Linear scan camera based inspection measuring the lean, diameter and height of a container.
- **ID Read - Data Matrix Spin Reader** - Camera based data matrix reader. The data matrix code can be located on either the neck or the body of the container.

Section 2 Ware Range

The Flexinspect T¹⁸⁰ is designed to handle both round and non-round containers.

Diameter: 16 to 170 mm [0.63 to 6.69 in.]

Finish 11-120 mm [0.43 to 4.72 in.]

Height*: 38 to 381 mm [1.49 to 15 in.] 110 to 450 mm [4.33 to 17.7 in.] optional

*Minimum shoulder height for small containers is 21 mm [0.827 in.]; maximum shoulder height for large containers (when the machine is equipped with the large container option) is 260 mm [10.24 in.]

Round containers include almost all cylindrical round shapes and most tapers within the ware range.

Non-round containers are limited to containers that have enough round surface areas in the neck or body to permit the container to be rotated in place. Special tooling is required for handling rotatable non-round containers. Containers also must be delivered to the machine standing upright on a conveyor. Certain shapes with rounded bases, such as ampoules, light bulbs, etc. are excluded.

Other Considerations: Some containers (round or non-round) might cause handling problems and should be tested by Emhart Glass. Examples of these containers include:

- Containers with extreme tapers
- Odd round or non-round shapes
- Containers with handles and/or flat or curved label panels
- Small diameter tall, round containers that tend to be top heavy and unstable

CAUTION: Misshapen and structurally weak containers might break during handling in the FleXinspect T¹⁸⁰. This might cause unscheduled down time and/or damage to handling components. The installation of a squeeze tester or freak detection device upstream of the FleXinspect T¹⁸⁰ is strongly recommended.

Section 3 Machine Speed

The FleXinspect T¹⁸⁰ is designed to run at a maximum speed of 400 bpm. The actual maximum speed is affected by the container dimensions and shape, as well as the type of starwheel tooling being used: conventional or basket-type. The table below provides a guide to the maximum machine speeds for the various basket-style bottle carrier configurations. Maximum speed also can be affected by plug penetration (only when the FleXinspect T¹⁸⁰ is equipped with optional mechanical plug/ring gauging). The minimum speed of the FleXinspect T¹⁸⁰ is 60 bpm

Table 1: Machine Speeds Guide for Basket-style Bottle Carriers

# of Pockets	Maximum Bottle Diameter	Rotate Stations Maximum	Inspection Stations	Maximum Speed
12	107mm	5	10	270 BPM **
24	79mm	7	13	400 BPM **

** Maximum machine speed based on mechanical design, actual running speed is affected by the container shape, size, weight, and inspection options chosen

Section 4

Tooling Overview: Standard tooling required for the FleXinspect T¹⁸⁰ consists of:

- 1 or 2 infeed screws (dual infeed screws are recommended for some tall containers).
- 1 bottle carrier assembly. Bottle carriers are available in two styles: conventional-style starwheels (usually upper and lower starwheel assemblies) or the basket-style carrier (Figure 2). Both types of bottle carriers are described below. Bottle carriers are used to transport containers from the infeed screw(s), through the inspection stations, to the outfeed assembly.

If the FleXinspect T¹⁸⁰ is equipped with optional mechanical plug/ring and/or dip/saddle inspections, plug/ring gauges, and FFS heads (dip/saddle inspection) are required.

Infeed Screws: FleXinspect T infeed screws are bottle diameter and shape specific.

Bottle Carriers: Two types of bottle carriers can be used on the FleXinspect T¹⁸⁰.

- **Basket style:** This type of bottle carrier includes a 3-section hub with finger assemblies (upper and lower fingers mounted to posts that are configured based on container diameter). The basket-style bottle carrier allows for the use of cameras and light sources installed in front of, and behind, containers at specific inspection stations. Basket-style bottle carriers are available in 12 and 24 pocket configurations.
- **Conventional-style:** This starwheel is usually configured as upper and lower starwheels, each comprising three segments that clip onto pins on upper and lower starwheel mounting hubs. NOTE: The conventional starwheel cannot be used for machine configurations that include the sidewall inspection option.
- **Plug/Ring Gauges:** Used only when the FleXinspect T is equipped with optional mechanical plug/ring gauging, plug and ring gauges are specific to the acceptable dimensions of the finish. Plug and ring gauges can be purchased from Emhart Glass (if specifications are provided) or blanks of these gauges can be purchased. Plug/ring gauges have Min, Max and length, 16399B for custom requirements that are container specific.
- **FFS Heads:** Used only when the FleXinspect T is equipped with optional mechanical dip/saddle gauging, FFS heads are specific to the finish diameter of the container and the amount of tolerance allowed for dip and saddle defects. See 1286B 51-131mm or 1295B 18-40mm finishes

Section 5 Inspection Notes

Check Detection – Inspection is limited to predominantly round surfaces on transparent containers. Containers that are opaque, translucent, or have very low light transmittance properties within the spectral range of modulated lights and receivers cannot be inspected. Container surfaces that are not round can present difficulties in inspection. Inspection of these containers might not be possible. Containers that are heavily embossed or lettered may present difficulties in inspection, requiring additional setup time.

Laser Vision Check Finish Module 29499A for flint and amber ware -1 light green -2 Dark green and Blue – The “LVC” finds cracks in the glass by detecting light scattering. This is done by injecting high intensity, coherent laser light into the glass wall and looking for a disruption in the coherency. Area of inspection is 35mm from top of finish for diameters up to 55mm.

- Stones, blisters, and cracks disrupt the light within the glass wall and creates a new light path within the glass that are then detected by the cameras.
- Surface features do not affect the coherent properties of the light.
- Defects are then classified using ADC principles to determine the defect type and limits.

Additional Conventional check channels 29500A1 – 17-32 includes 8 sensors, and 8 receivers providing an additional 16 modulated channels

Mold Number Reading (dot code reader): The FleXinspect T¹⁸⁰ standard dot code reader is capable of reading dots embossed on the heel of the container. Dots must be within proper specification, with proper clearance from other container markings, to allow proper sensing. The dots must be positioned on a round surface on the container, usually in the heel area, although neck and shoulder areas also might be suitable. Certain container shapes might cause the reader head to be positioned at an angle that conflicts with tooling (guide rails) requiring additional setup time. The reader head must be The FleXinspect T¹⁸⁰ mold number reader cannot read “peanuts” or numeric codes located on the base of the container. (Base codes, including peanut and numeric, can be read by the optional vision mold number reader.)

The FleXinspect T¹⁸⁰ Mold Number Reader supports the following code types:

9-dot heel code	8- and 9-dot OI heel code	➤ 10-dot heel code	8-dot BSN heel code	6-dot mini code
-----------------	---------------------------	--------------------	---------------------	-----------------

Specifications for the engraving of the Emhart and SGCC codes are described in the document, 22444A, *Specifications for Emhart Glass Mold Number Reader*,

Base Code Vision Mold Number Reader (optional) 29509A – Image acquisition is performed using a super bright LED light source with a high speed area array matrix camera (1.3mp resolution) positioned above the container. The FleXinspect T Vision Mold Number Reader supports the following base code types:

MSC alphanumeric	10 dot round bottom	8 dot peanut	7 dot bottom	Owens 8 dot bottom
------------------	---------------------	--------------	--------------	--------------------

9011C *Specifications for Emhart Glass Numeric code*,

Vision Plug/Ring/Dip – Vision plug, ring, and dip/saddle inspections are all performed using four multi-trigger cameras and light sources in a single, rotator-enabled station.

Finish Diameter: Up to 63mm [2.48 in.] max for narrow neck finishes 29486A

Up to 113mm [4.45 in.] max for wide mouth finishes 29486A1

FleXinspect T¹⁸⁰ vision plug inspection is performed using on-axis directional diffuse light and a high-resolution camera with telecentric optics mounted above the rotating container. It is capable of inspection for min and max “I” only (refer to Figure 3). It is not capable of dual step plug gauging often required for corkage bottles. Dual step plug gauging can be performed only with the mechanical plug/ring gauging option. During rotation several images are acquired. The software measures and reports the largest minimum measurement from the captured images.

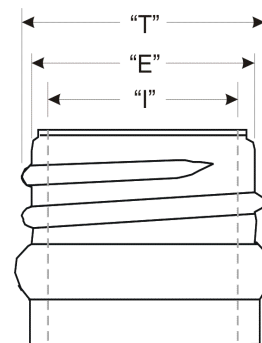


Figure 3: Finish

FleXinspect T¹⁸⁰ vision Ring inspection, two high speed cameras take multiple images of the container’s finish as the container rotates using a diffuse back light (same light source that is used for dip inspection) to measure “E” and “T” dimensions (refer to Figure 3) as well as detecting Knock out, Flanged, and Overhang defects.

FleXinspect T¹⁸⁰ vision Dip inspection, image acquisition is performed using directional lighting and a high-resolution camera focused on the top and inside of the finish as it rotates in the station. Used to detect Dip and saddle defects

Wall Thickness Inspection – The FleXinspect T¹⁸⁰ can be equipped with an inspection system that uses a chromatic light method to measure glass thickness of containers as they rotate in front of adjustable sensing heads. This inspection also has an ovality inspection used to measure the roundness of a container, as well as a fin detector to detect fins on the mold seams.

Chromatic technology sensing system. This measurement technology uses the color spectrum of light reflected from glass to determine glass thickness of round, as well as some non-round, containers. The chromatic system also uses relatively small sensing heads that can be positioned easily so that almost any area of the container can be inspected as it is rotated in front of the sensing heads. Up to four sensing heads can be installed at any rotator-enabled inspection station.

- Precitec Standard offering 29511A1 – 4 to determine the number of probes.
- VMA optional 29728A1 - 4 to determine the number of probes. Used for special applications

2 Point Out Of Round (OOR) – This inspection is performed using advanced sensing technology to detect out of round containers based on variances in maximum and minimum diameter, as well as maximum acceptable variance from maximum and minimum diameter at a specific position on the container. This inspection can control up to 2 elevations on the container.

Complete Sidewall Inspection 29772A – The FleXinspect T¹⁸⁰ sidewall inspection is performed using two high resolution line scan cameras looking directly through the center axis of the bottle as it rotates, providing a true, 360-degree “unwrapped”, image of the container. The height of the two upper cameras can be adjusted to provide coverage over the complete height of the bottle. Defects can be seen with no distortion so reject limits can be set using actual defect size. Embossing can be located and inspection performed both within the embossing, as well as around it. The FleXinspect T¹⁸⁰ sidewall inspection is capable of inspecting round containers. This option requires 2 fixed location rotary equipped stations, one dedicated to lower sidewall with a Field of view “FOV” of 200mm and the other for upper sidewall which is adjustable and also provides a FOV of 200mm. Transparent “cosmetic” defect detection is included in this option. Sidewall Stress Inspection using two dedicated high resolution line scan cameras with cross polarization technology is also included in the same stations as the sidewall inspection. This inspection detects defects such as stones causing stress, viscous knots and other annealing issues.

Complete Base/ Base Stress Inspection 29541A – The base inspection uses high resolution array scan camera technology, capturing multiple images of the container as it rotates in the inspection station, the container image is reconstructed to provide an image of the containers base used to inspect for opaque defects. This option requires a rotary equipped station and includes Base Stress Inspection that uses a dedicated high resolution array scan camera with cross polarization technology, capturing multiple images of the container as it rotates in the inspection station. The container image is reconstructed providing an image of the containers base and detects defects such as stones causing stress, viscous knots and other annealing issues.

Mechanical Plug/Ring 29652A – Servo position mechanical plug/ring gauge whose position and penetration levels are adjusted in the software. There are separate output measurements for plug and ring. The following defects can be detected: minimum bore, maximum bore, maximum T (over diameter) and minimum E (under diameter). Mechanical plug gauging will affect the overall speed of the machine.

Maximum Machine Speeds With Mechanical Plug Enabled

Plug Penetration	12 pocket	24 pocket
22 mm [0.875 in.]	270 bpm	320 bpm
38 mm [1.5 in.]	270 bpm	320 bpm
54 mm [2.125 in.]	270 bpm	280 bpm
70 mm [2.75 in.]	140 bpm	250 bpm
86 mm [3.375 in.]	140 bpm	220 bpm
102 mm [4.0 in.]	140 bpm	150 bpm

Mechanical Dip/Height 29563A– Mechanical inspection performed using a servo positioned FFS (Fluidic Finish Head) whose position and compression levels are adjusted in the software. The following defects can be detected: dipped/unfilled finish, saddled/warped finish, over height and under height.

Dimensional Inspection 29507A – Dimensional inspection is performed using two linear scan cameras and white LED light columns installed opposite of each other at a 45-degree angle to the conveyor. The following inspections can be performed: Lean, Diameter and Height. The optical enclosure is located “downstream” outside the outfeed of the machine which requires one of the following conveyor options:

One meter of outfeed conveyor free of guiderails or other obstructions is needed to use the lean inspection option.

Sealing Surface Inspection 29510A – Surface inspection using a high-resolution linear scan camera in a rotary station acquiring multiple images and then unwrapping the image. Used for finishes up to 120 mm.


ID Read - Data Matrix Spin Reader 29518A - High speed Camera based data matrix reader. The data matrix code can be positioned on either the neck or the body of the container and must be located in a rotary equipped station. This inspection is an integral part of the End to End process.

Section 6 Site Preparation and Installation Requirements

NOTE: Refer to 13105DIN installation drawing for detailed machine clearances shown in Figure 1.

Area Preparation The area where the FleXinspect T¹⁸⁰ must include:

- A straight, level area that is free of legs and under-conveyor obstructions (minimum conveyor height is 914 mm [36 in.] max is 1675 mm [65.9 in.]). The FleXinspect T¹⁸⁰ cannot be installed on an incline or decline.
- Conveyor infeed to outfeed spacing Minimum 1509 mm [59.4 in.]
- A clear height of at least 1569 mm [61.8 in.] above the top of the conveyor.

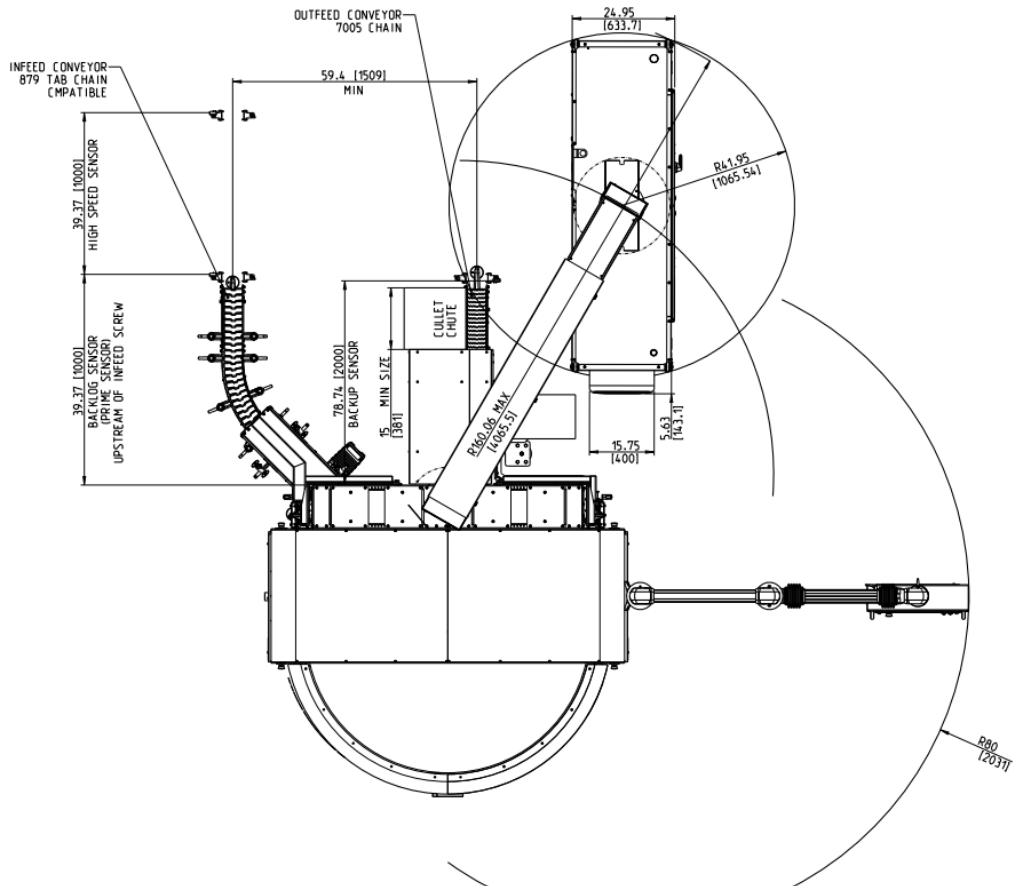

Moving the FleXinspect T¹⁸⁰

The FleXinspect T¹⁸⁰ is a large, heavy machine that requires special handling when moving and installing the machine. Whenever possible, the machine should not be unbolted from its pallet until it is at the installation site.



WARNING!

The crated weight of the machine is approximately 2,500 kg. [5,500 pounds]. The crated weight of the remote cabinet is approximately 670 kg [1,485 pounds].

The machine is front-heavy. If not lifted correctly, the machine will fall forward causing significant damage to the machine and possible serious injury to anyone standing near the front of the machine.

When lifting and moving the machine and the remote electronics cabinet, be sure to follow the installation instructions provided with the machine.

Conveyor Control System Integration. The FleXinspect T¹⁸⁰ is designed to interface with most plant conveyor control systems. However, ***Emhart Glass cannot be responsible for the modification or performance of a conveyor control system. Our responsibility is limited to the supply and performance of the FleXinspect T¹⁸⁰ and its integrated conveyor system.*** Any conveyor/machine control issues must be reviewed and resolved during machine specification. Emhart Glass will work with customers and/or their conveyor supplier(s) to meet specific line requirements; however, the customer has the ultimate responsibility for any changes that must be made to the conveyor control to enable interface with the FleXinspect T¹⁸⁰ machine and conveyor.

Conveyor Control Considerations When the FleXinspect T¹⁸⁰ is interfaced with a plant conveyor control system, the speed of the FleXinspect T¹⁸⁰ must be set in such a way that speed of the machine and the conveyor retain the same ratio.

There are two ways to achieve this machine-conveyor speed ratio goal:

- Configure the conveyor to follow the FleXinspect T¹⁸⁰ and set the amount of time it takes for the conveyor to accelerate (ramp up) to its new speed to be as short as possible.
- Configure the FleXinspect T¹⁸⁰ to follow the conveyor and set the time that it takes for the conveyor to accelerate to be longer than the time it takes for the machine to accelerate to the new speed.

NOTE: *If either of the above two goals is not achieved, ware can accumulate between machines. If the accumulation of ware exceeds the capacity of the conveyor between the machines, containers can fall over or back up into an upstream machine.*

The best way to achieve either of the machine-conveyor speed control goals is to control the speed of the mechanical machine using an analog speed reference signal from the plant line control system to the FleXinspect T.

The FleXinspect T accepts an analog signal with 4-20ma

The line control system then must be configured as follows:

1. The line control system sends a speed control signal to the FleX T¹⁸⁰.
2. Allow adequate time for the FleX T to change its speed and provide a feedback speed reference signal to the conveyor controller telling the controller how fast the FleX T¹⁸⁰ is now running.
3. Set the conveyor controller to follow the speed of the FleX T¹⁸⁰ as closely as possible.

When the above procedure is followed, the FleXinspect T¹⁸⁰ and its conveyor can maintain the correct speed ratio and the conveyor control system can respond to a speed change demand as quickly as possible, thereby reducing ware flow problems upstream or downstream of the FleXinspect T¹⁸⁰.

Air and Power Requirements

NOTE: *It is the customer's responsibility to provide a stable, clean power supply to the FleXinspect T¹⁸⁰. Power fluctuations (high or low voltage conditions) can cause the FleXinspect T¹⁸⁰ to shut down and/or stop unexpectedly, as well as damage electronic components in the machine.*

Power: 380 to 480 VAC, 3 phase, 30 amps (max. consumption: 40 amps at 460 VAC)

Air: 3.5-8.3 bar [50-120psi] nominal consumption 0.8 to 0.85 m³/minute (28.3 ft. 3/min)

Section 7 Operating Environment

Enclosures: All electrical/electronic and camera enclosures used in the FleXinspect T¹⁸⁰ should be considered rated for NEMA 12 and IP20.

The FleXinspect T¹⁸⁰ is equipped with a closed-loop air conditioning system designed to maintain the FleXinspect T¹⁸⁰ internal temperature at or below 50°C [122°F]. The temperature is constantly monitored and the user interface will display the following conditions when temperatures inside the electronic cabinet exceed set points. The following two A/C options are available.

Conventional A/C - Freon based 12325C or Heat exchanger cooling 12326C for a common central chiller location. Chiller is not supplied.

Fault Message	Description	Machine State
Over temperature warning	The temperature inside of the electronics cabinet has exceeded the user set warning.	<ul style="list-style-type: none"> Counters reset Machine status icon is yellow.
Over temperature fault	The temperature inside of the electronics cabinet has exceeded 50 C.	<ul style="list-style-type: none"> Machine stopped Red stop button is illuminated Counters reset icon flashing. Machine status icon is red. <p>Note: Machine will not restart until the condition that caused the alarm is resolved and cabinet temperature is below 50 C.</p>
Air conditioner fault.	The electronics cabinet air conditioner has stopped.	

Operating Temperatures: The FleXinspect T¹⁸⁰ is controlled by electronic equipment that is designed to operate in the majority of glass plant environments without modification. However, since conditions can vary from one installation to another, the following operating conditions must be observed. Failure to maintain these requirements will affect the applicable warranties covering the Emhart Glass hardware and software associated with the FleXinspect T¹⁸⁰. If the proper operating conditions are not maintained, the electronic hardware might not function as designed.

1. The internal temperature (with covers closed) must be maintained at or below 50°C [122°F].
2. The maximum allowable temperature inside the machine is 55°C [131°F]. Although control components can operate at this upper temperature, life expectancy of the electronic components will be reduced. The lowest recommended operating temperature is 5°C [41°F]. Maximum relative humidity is 95%, non-condensing.

CAUTION! Components within the electronic console must be kept clean. The life expectancy of electronic components will be substantially reduced if they are contaminated with plant dirt (swab oil, dust, etc.). The accumulation of these substances on electronic components causes the actual temperature of these components to be much higher than the temperature of air within the control cabinet.

Container Temperature: The machine handling equipment is rated for 60°C [140°F] maximum container temperature at machine infeed. Containers hotter than this can cause damage to handling equipment and can cause the internal machine temperature to rise above acceptable limits as outlined above.

Section 8 *Conformity Statement*

The FleXinspect T conforms to the provisions of the following European CE directives and standards:

- Directive 2014 / 35 / EU (Low Voltage Directive)
- Directive 2014 / 30 / EU Electro Magnetic Compatibility Directive (EMC)
- Directive 2006 / 42 /EC Machine Directive
- Directive 2014 / 53 / Radio Equipment Directive (RED)

Additional standards apply

- EN 60204-1:2018, Safety of machinery – Electrical equipment of machines - Part 1
- EN ISO 12100:2010, Safety of machinery - Basic concepts, general principles for design
- EN ISO 13849-1:2015, Safety of machinery. Safety-related parts of control systems. Part 1
- EN ISO 13849-2:2012, Safety of machinery. Safety-related parts of control systems. Part 2
- EN 61000-6-2:2019, EMC – Immunity
- EN 61000-6-4:2019, EMC – Emission
- EN 55011 – Radio-frequency disturbance characteristics – Limits and Methods of measurement

This declaration relates exclusively to the machinery in the state in which it was placed on the market and excludes components which are added and/or operations carried out subsequently by the final users.

Section 9 *Specifications Required for Order Entry*

The following items are configurable and require specification when ordering:

- Machine hand
- Plant voltage
- Conveyor installation type and height
- Conveyor infeed to outfeed centerline spacing
- Tooling - Container specifications and drawings are required
- Inspection options
- Line layout drawings

Section 10 Spare Parts

Spare parts kits are available for the base machine, as well as for the optional inspections. The FleXinspect T¹⁸⁰ is covered by a one-year parts and labor warranty; however, spare parts kits are strongly recommended. If an adequate supply of spare parts is maintained, critical parts, when needed, will be available if they fail or wear out prematurely. An adequate spare part inventory also helps reduce downtime or extended unsatisfactory machine operation caused by occasional out-of-stock conditions and time required to order and ship required parts. Parts failing within the specified warranty period will be replaced free of charge when returned to Emhart Glass under a Return Authorization number provided by Emhart Glass.

Spare parts have been organized in the following manner.

Machine Spares

Wear Parts Kit PN 13100D1SP – This kit contains parts to be considered consumables, these are parts that need to be replaced over time. Items like belts, rollers and rotator tires are included in this kit.

Basic Spares Kit PN 13100D1SP1– This kit contains the recommended required parts for the base machine and includes the Wear parts kit above.

Advanced Spares Kit PN 13100D1SP2 - This kit contains both the Basic spare parts and Wear parts, as well as additional parts to cover almost all failure conditions, including major vision system components (computer, optics, and light sources for plug, ring, dip/saddle inspections).

Additional Spare Parts Kits:

- 12600D1SP3 – Basic spares for “Precitec” wall thickness
- 12600D1SP4 – Advanced spares for “Precitec” wall thickness including basic spares
- 12600DSP5 – Spare parts for mechanical Plug / Ring
- 12600DSP6 L/R – Spare parts for mechanical Dip / Saddle / Height
- 13100D1SP6 – Spare parts for vision Plug / Ring / Dip
- 13100D1SP4 – Spare parts for Sidewall / Sidewall stress
- 13100D1SP8 – Spare parts for Base / Base stress
- 13100D1SP5 – Spare parts for vision Mold reader
- 12600DSP12 – Spare parts for “Line scan” vision inspections
- 13100D1SP7 – Spare parts for vision computer
- 13100D3SP9 – Spare parts for VMA wall thickness

Section 11 Training

Setup operation and maintenance training by Emhart Glass personnel is mandatory for optimum machine operation and extended life. A machine-specific service program also is available for the FleXinspect T. Training programs, offered either at Bucher Emhart Glass training centers in Windsor Ct. (USA) or Munich, Germany or at your plant, provide plant personnel with hands-on experience in all aspects of machine job change, maintenance, troubleshooting, and operation. We recommend training for all lead maintenance and setup personnel (at least one per shift). This helps facilitate optimum, 24-hour-a-day machine operation and can virtually eliminate costly machine maintenance and service calls.

Section 12 Special Handling Kits

Special tooling is required for handling rotatable non-round containers. The following kits are available:

Non-Round Handling Kit (Part # 28153AL/R) Ware handling kit designed for non-round containers including special guide rails.

Hybrid Stripper Assembly (Part # 11434C) a special bottle specific stripper that is mounted on the live outfeed to assist in orienting flat bottles or flasks.

Mini Ware Kit (Part # 26921AL/R) Ware handling kit designed for small ware.

Section 13 Shipping Specifications

Shipment of the Flexinspect T¹⁸⁰ consists of three crates;

- Machine, crated weight of approximately 2,495 KG {5,500 pounds}
- Conveyor, crated weight of approximately 961 KG {2,120 pounds}
- Electronics cabinet, crated weight of approximately 673.6 KG {1,485 pounds}

Revisions

Rev.	Date	Description
A	August 2023	Initial release